

HƯỚNG DẪN LẮP ĐẶT

PHÒNG TẮM XÔNG HƠI

MODEL : FS-8819 FS-8820 FS-8821 FS-8822 FS-8823
FS-8825 FS-8826 FS-8827 FS-8829 FS-8830 FS-8831



KIND WARMING TO OUR RESPECTED CLIENTS

1. Please read the instructions carefully before using the product.
2. Elderly people and pregnant women should not use steam bath.
3. Children using steam bath must be accompanied by adults.
4. People under the influence of asthma, high blood pressure or heart disease should not use steam bath.
5. Press the stop key at once if you have any uncomfortable feeling.




Contents

Computerized steam room diagram instruction	<1>
FS-8829 series installation manual	<2-5>
FS-8830 series installation manual	<6-9>
FS-8831 series installation manual	<10-13>
FS-8819 series installation manual	<14-16>
FS-8821 series installation manual	<17-19>
FS-8822 series installation manual	<20-23>
FS-8820 FS-8823 FS-8826 FS-8827	
FS-8825 series installation manual	<24-26>
Remotor function instruction	<27-28>
Water and electric diagram appendix	<29>
Precautions for safety and maintenance	<30>
Common trouble analysis	<31-32>


1. Water supply: G1/2 cold-hot water pipe,height H=+800mm, penetrating the wall for the stop valve.
- 2.Dry steam stove power:220V/50HZ three-wire single phase, capacity over 16A,height H= +1000mm.
- 3.Bath room power:220V/50Hz,capacity over 16A,height H=+1000mm.
4. Water discharge: Water discharge hole is within an area of 500mm from the center shown in the diagram.
- Note: Water discharge hole is at a position other than the center shown in the diagram.
- Note: Please reserve places in case of types with CD or telephone functions.

Installation Illustration Diagram of Computerized Steam Bath Room Water and Electricity System


TYPE:FS-8019 Left Rim
SIZE:1720x850x2190mm

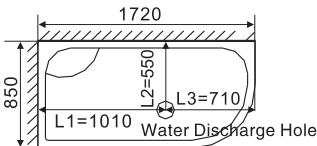

Plane Diagram

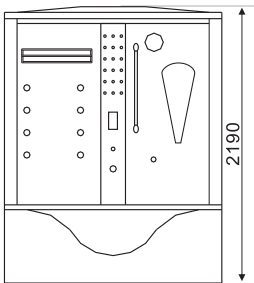

Elevation Diagram

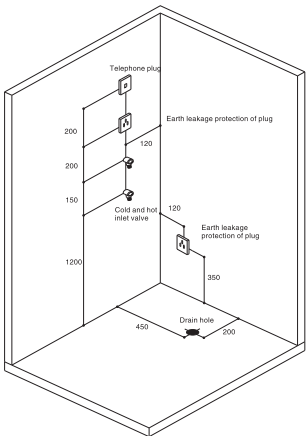


Three-dimensional Installation Diagram

Computerized steam room specification and water outlet hole size

TYPE:	FS-8829
SPECIFICATION:	90 × 90 × 215cm
HOLE POSITION:	L1=74cm L2=16cm
TYPE:	FS-8830
SPECIFICATION:	90 × 90 × 215cm
HOLE POSITION:	L1=74cm L2=17cm
TYPE:	FS-8831 (▲)
SPECIFICATION:	90 × 90 × 215cm
HOLE POSITION:	L1=74cm L2=17cm
TYPE:	FS-8822
SPECIFICATION:	150 × 150 × 215cm
HOLE POSITION:	L1=90cm L2=90cm
TYPE:	FS-8825 (▲)
SPECIFICATION:	170 × 90 × 215cm
HOLE POSITION:	L1=45cm L2=20cm
TYPE:	FS-8827
SPECIFICATION:	100 × 100 × 215cm
HOLE POSITION:	L1=80cm L2=18cm
TYPE:	FS-8819
SPECIFICATION:	98 × 98 × 215cm
HOLE POSITION:	L1=23cm L2=23cm
TYPE:	FS-8820
SPECIFICATION:	136 × 136 × 215cm
HOLE POSITION:	L1=105cm L2=26cm
TYPE:	FS-8821 (▲)
SPECIFICATION:	120 × 85 × 210cm
HOLE POSITION:	L1=103cm L2=18cm
TYPE:	FS-8823 (▲)
SPECIFICATION:	150 × 88 × 215cm
HOLE POSITION:	L1=44cm L2=20cm
TYPE:	FS-8826
SPECIFICATION:	123 × 123 × 215cm
HOLE POSITION:	L1=94cm L2=24cm

Note:1. Refer to the illustration for the lengths of L1 and L2.
In case of left and right rims, they should be in conformity with the illustration.
2. "▲" indicates there are left and right rims for choice.

- 1.top cover(1pc)
2.M4*25(10pcs)
3.elevater level(1pc)
4.armrest(2pcs)
5.fixed left door(1pc)
6.hexagonal screw(12pcs)
7.left side fixed door(1pc)
8.aluminum plate(1ps)
9. Plasic circle(10psc)
10.towel shelf(1pc)
11.left fixed door(1pc)
12.basin(1pc)
13.flexible door(1pc)
14.hander(1pc)

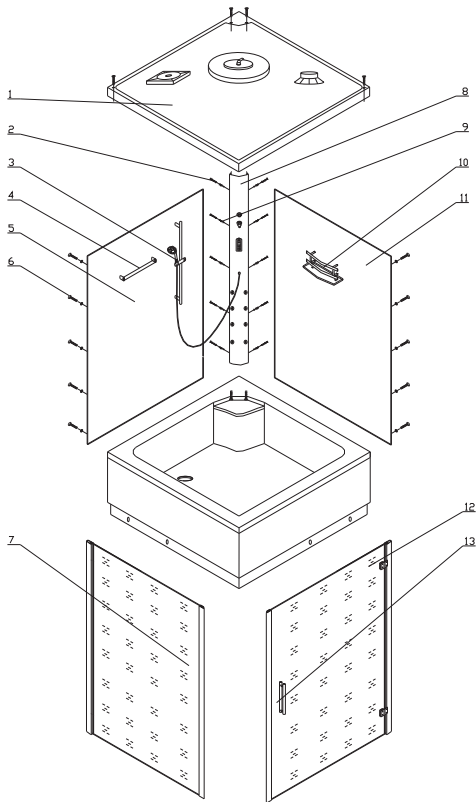

Procedure of products installation

1. Levelling the basin at the installation corner, place a levelling rule on the tub, adjust the foundation bolt at the bottom to enable all the bolts to touch the ground and level the tub.
See illustration diagram 1.

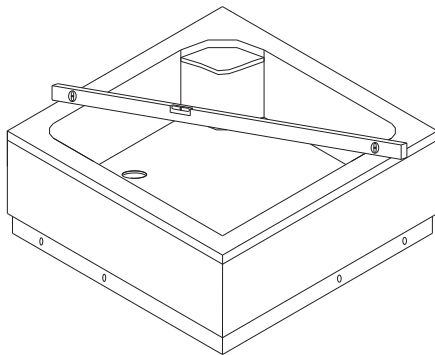


Diagram 1

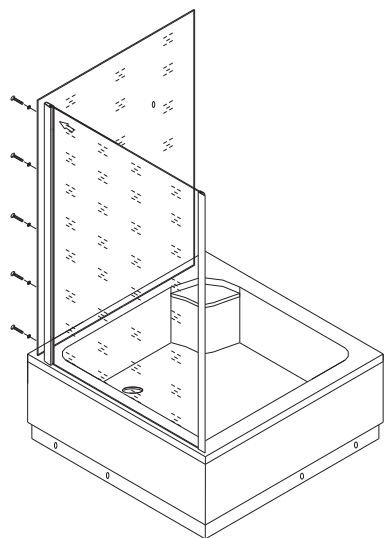


Diagram 2

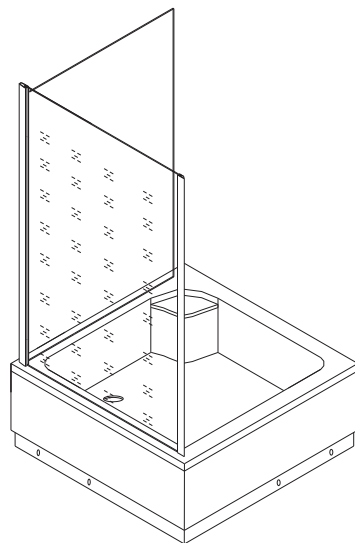


Diagram 3

2. Place the fixed door and left fixed door on the top of the basin, fix it with hexagonal screws. See diagram 2 & 3.

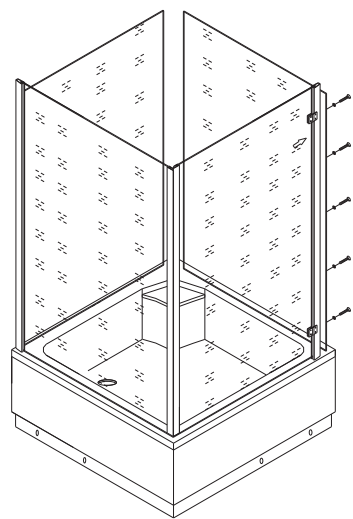


Diagram 4

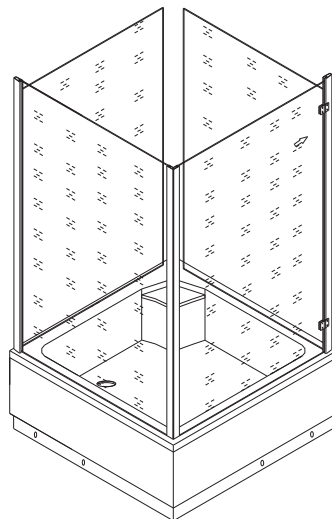


Diagram 5

3. Place another fixed door and flexible door on the top of the basin, fix it with the hexagonal screws. See diagram 4 & 5.

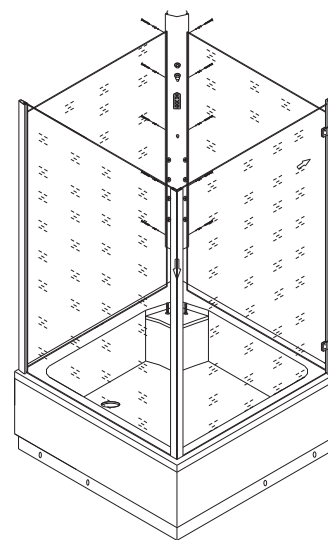


Diagram 6

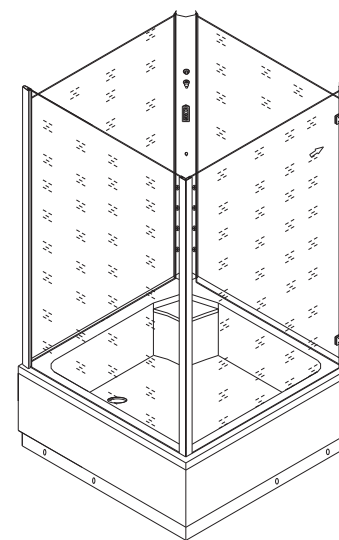


Diagram 7

4. Insert the aluminum plate between the two fixed doors, fix with hexagonal screws with them. See diagram 6 & 7.

5. Instal the hander, armrest, towel shelf, elevator level, shampoo shelf on the steam house. See diagram 8.


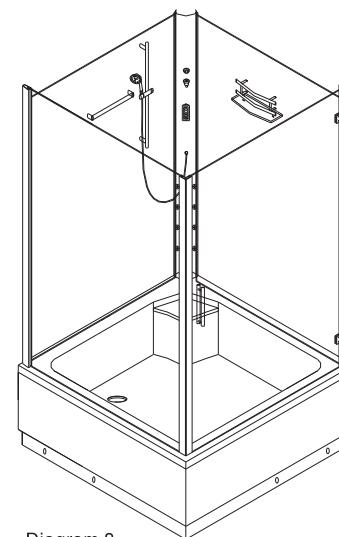


Diagram 8

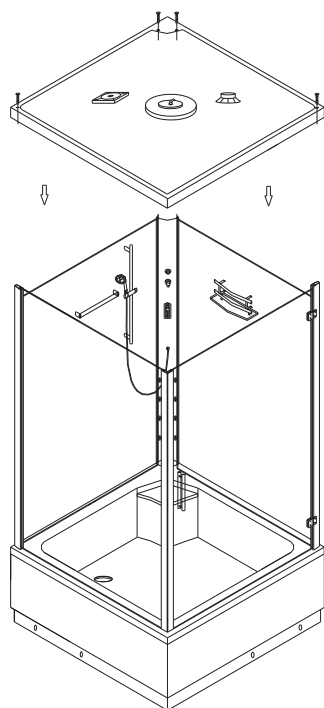

6. Place the top cover on the top of the steam room, fix it with the hexagonal screw. See diagram 9.

Diagram 9

7. Connect with all the water pipe, insert with the CD, telephone and electricity. The steam room now is ready to enjoy. See diagram 10.


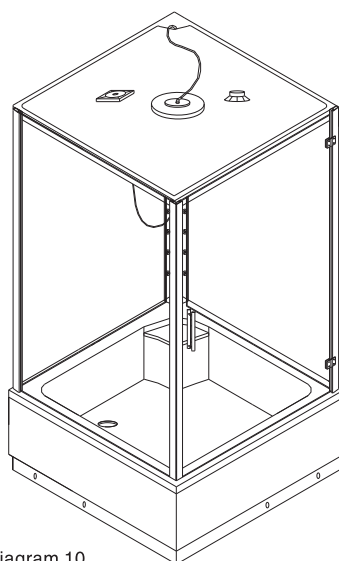


Diagram 10

- 1.top cover(1pc)
- 2.M4*25(10pc)
- 3.elevator level(1pc)
- 4.armrest(2pc)
- 5.left fixed door(1pc)
- 6.hexagonal screw(12pc)
- 7.left side fixed door(1pc)
- 9.hander
- 9.aluminum panel(1pc)
- 10.plastic cycle(10pc)
- 11.towel shelf
- 12.right fixed door(1pc)
- 13.right side fixed door(1pc)
- 14.flexible door(1pc)

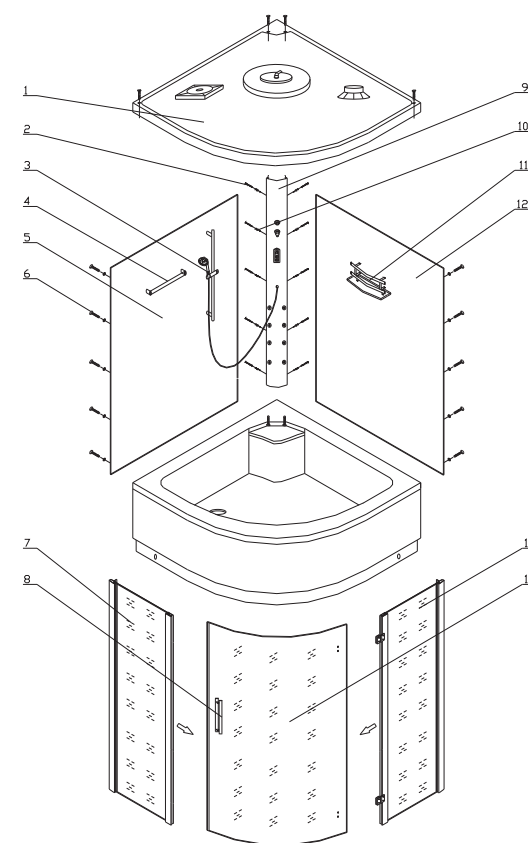

Procedure of products installation

- 1.Place the basin at the installation corner, place a levelling ruler on the tub, adjust the foundation bolt at the bottom to enable all the bolts to touch the ground and level the tub. See diagram 1.

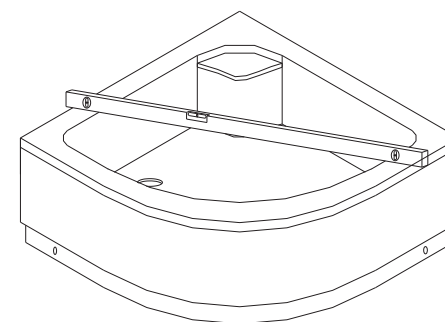


Diagram 1

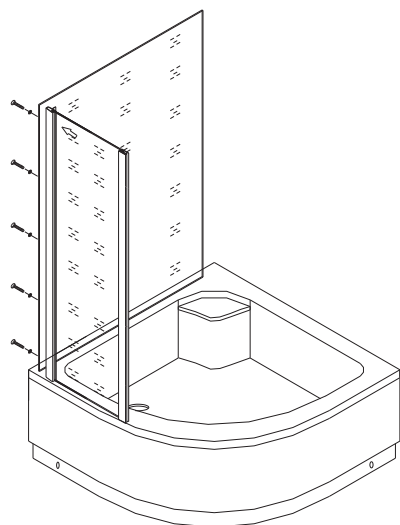


Diagram 2

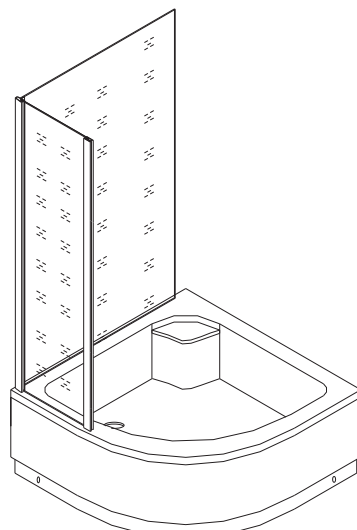


Diagram 3

2. Place the fixed door and left side fixed door on the top of the basin, fix them with hexagonal screws. See diagram 2&3.

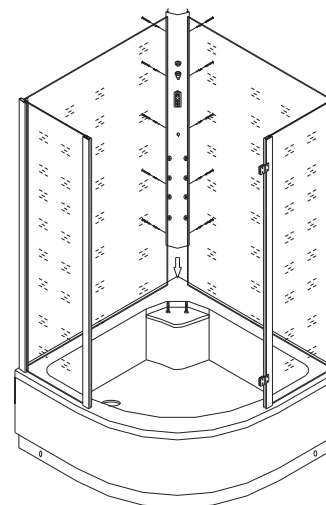


Diagram 6

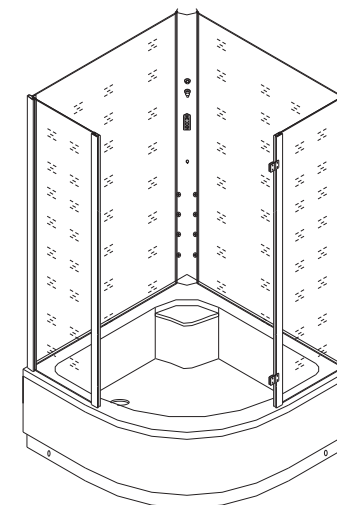


Diagram 7

4. Insert the aluminum panel between the two fixed doors, fix with hexagonal screws with glass doors. See diagram 6 & 7.

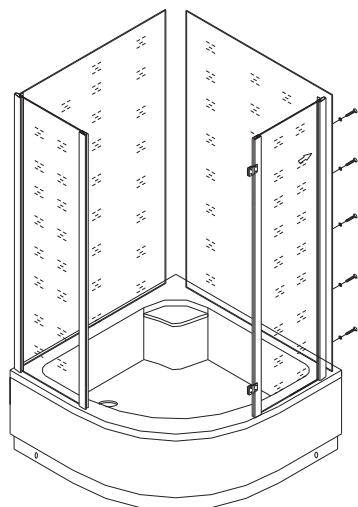


Diagram 4

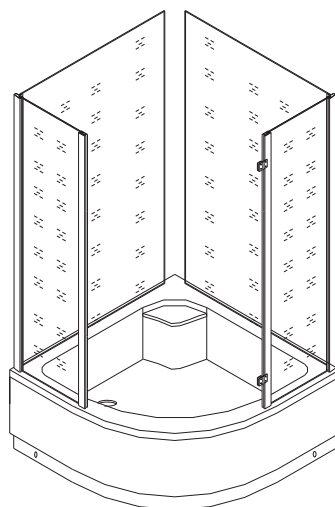


Diagram 5

3. Place another fixed door and right side fixed door on the top of the basin, fix them with hexagonal screw. See diagram 4 & 5.

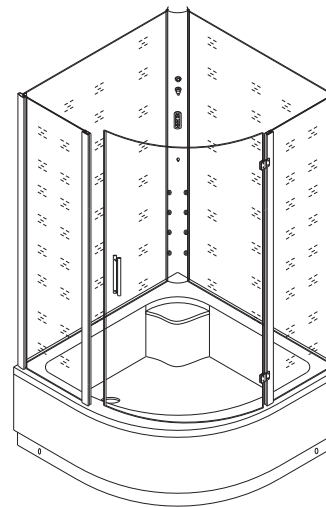


Diagram 8

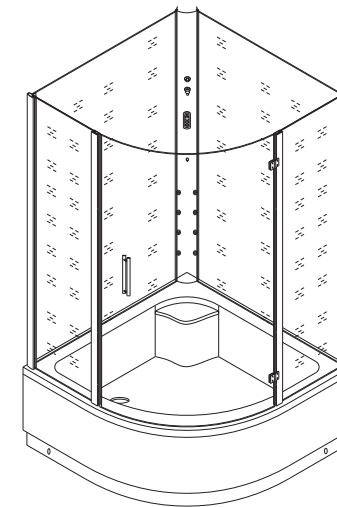


Diagram 9

5. Instal the flexible door with the fixed door, fix the doors with the connector. See diagram 8 & 9.

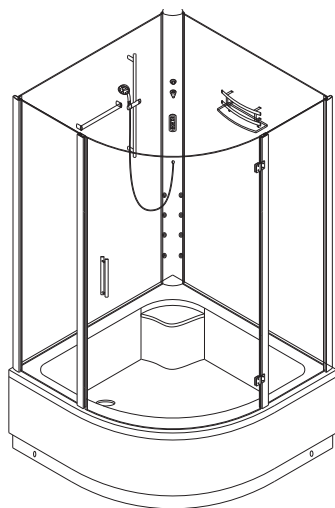


Diagram 10

6. Instal the hander,armrest,towew shelf,elevator pillar,foot massage on the steam house one by one.See diagram 10.

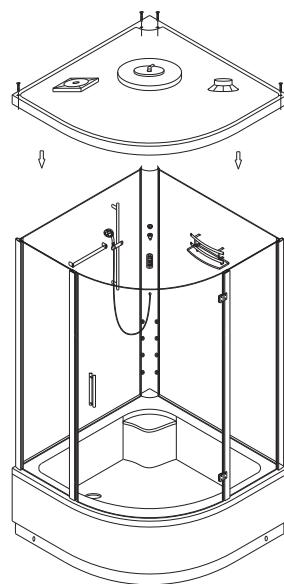


Diagram 11

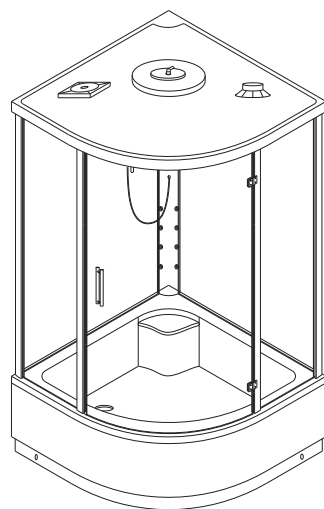


Diagram 12

7. Place the top cover on the top of the steam rooom,fix it with hexagonal screws. See diagram 11 & diagram 12.

8. Place all the water pipe,connect with CD, telephone,and electricity.The steam room is ready to enjoy. See diagram 13.


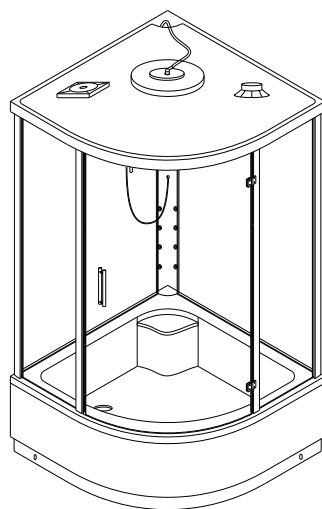


Diagram 13

- 1.top cover(1pc)
- 2.M4*25(10pc)
- 3.elevator level(1pc)
- 4.armrest(2pc)
- 5.left fixed door(1pc)
- 6.hexagonal screw(12pc)
- 7.left side fixed door(1pc)
- 8.flexible door(1pc)
- 9.hander
- 10.aluminum panel(1pc)
- 11.plastic cycle(10pc)
- 12.towel shelf
- 13.right fixed door(1pc)
- 14.basin
- 15.right side fixed door(1pc)

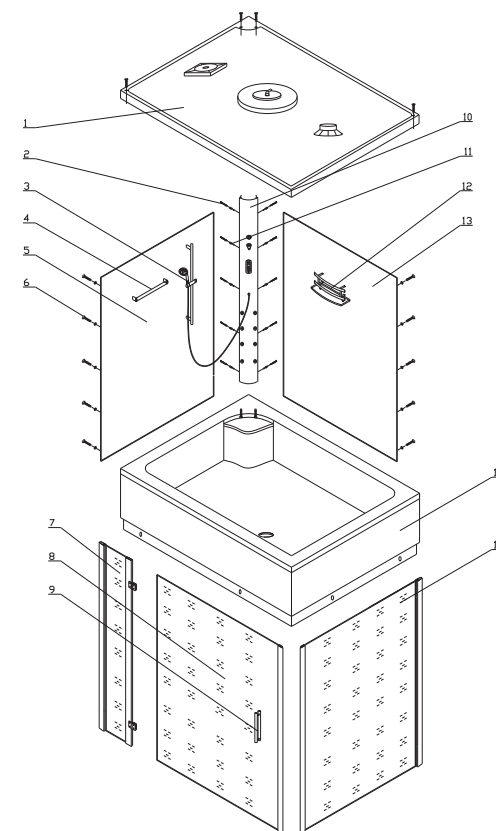

Procedure of products installation

1. Place the basin at the installation corner,Place a levelling ruler on the tub,adjust the foundation bolt at the bottom to touch the ground and level the tub. See diagram 1.

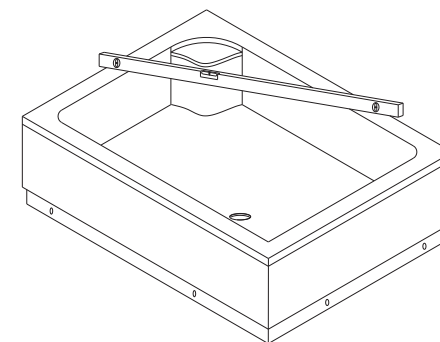


Diagram 1

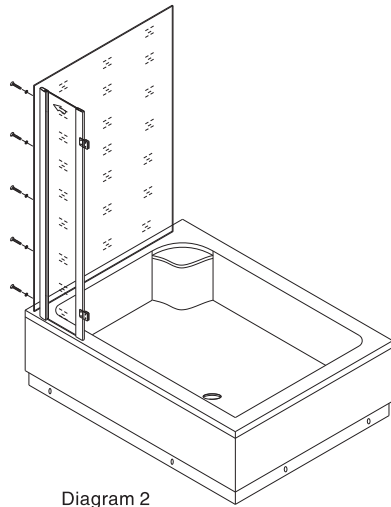


Diagram 2

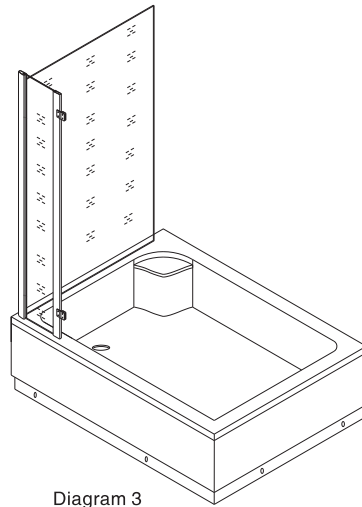


Diagram 3

2. Move the fixed door and left side fixed door on the top of the basin, fix them with hexagonal screws. See diagram 2 & 3.

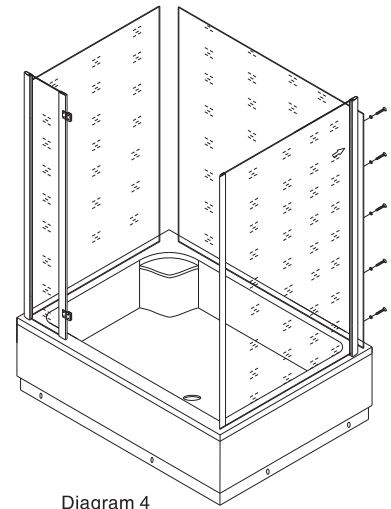


Diagram 4

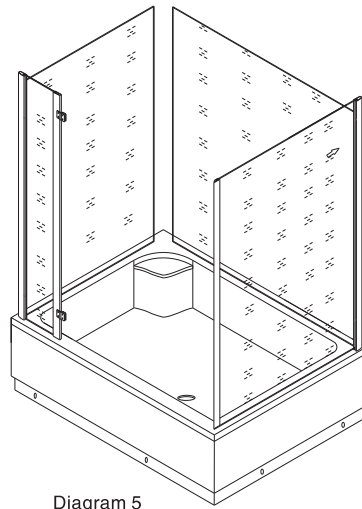


Diagram 5

3. Move another fixed door and right side fixed door on the top of the basin, fix with hexagonal screws too. See diagram 4 & 5.

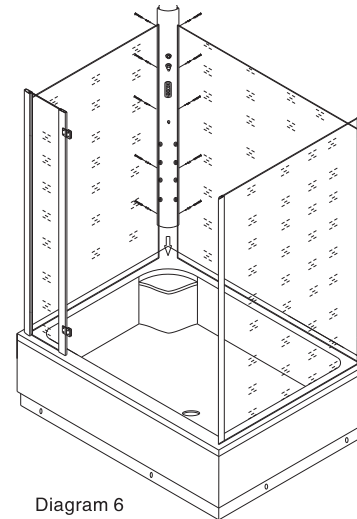


Diagram 6

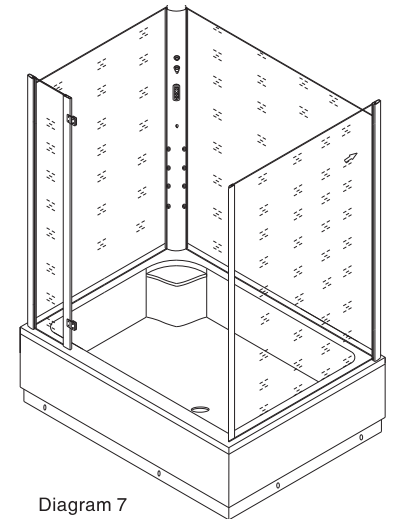


Diagram 7

4. Insert the aluminum panel between the fixed doors, connect with hexagonal of the door fixed glass doors. See diagram 6 & 7.

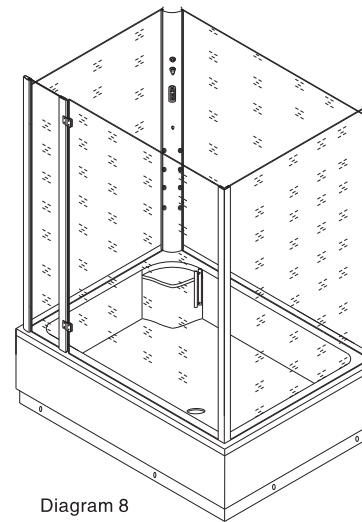


Diagram 8

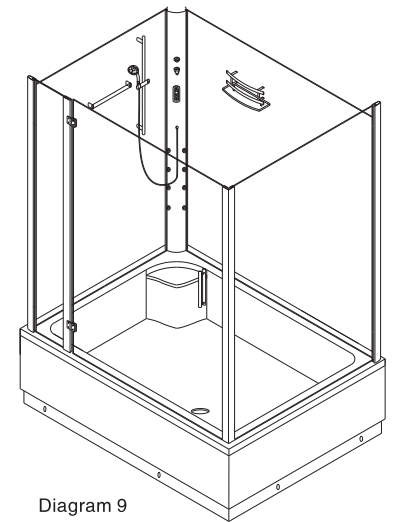


Diagram 9

5. Instal the flexibe door with the fixed door, fix it with the connector. See diagram8
6. Place the hander, armrest, towel shelf, elevator level ,shelf on the steam room. See diagram 9.

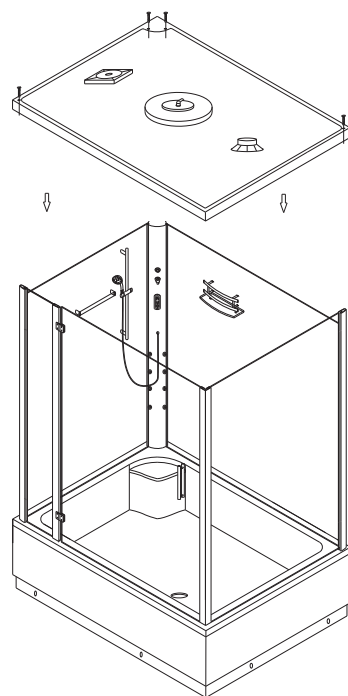


Diagram 10

8. Link with water pipe, connect with CD, telephone, and electric. The steam room installation is completely finished. See diagram 11.

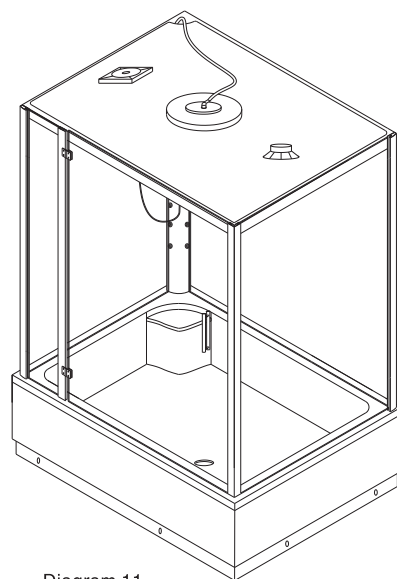


Diagram 11

7. Place the cover on top of the steam room, fix with hexagonal screw. See illustration 10.

One. Preparation


1. Please check before all the accessories are completed.
2. Pre-reserved the water hole of the basin before make sure the installing place.
3. Pre-reserved water holes on the wall with the steam room cold and hot water let in.
4. Pre-set the safety socket and wire properly before installation.

Two. Tools preparation


- | | |
|--------------------|---|
| (1) leveling ruler |  |
| (2) screw tool |  |
| (3) wrench |  |

Third. Installation procedure


1. installation diagram

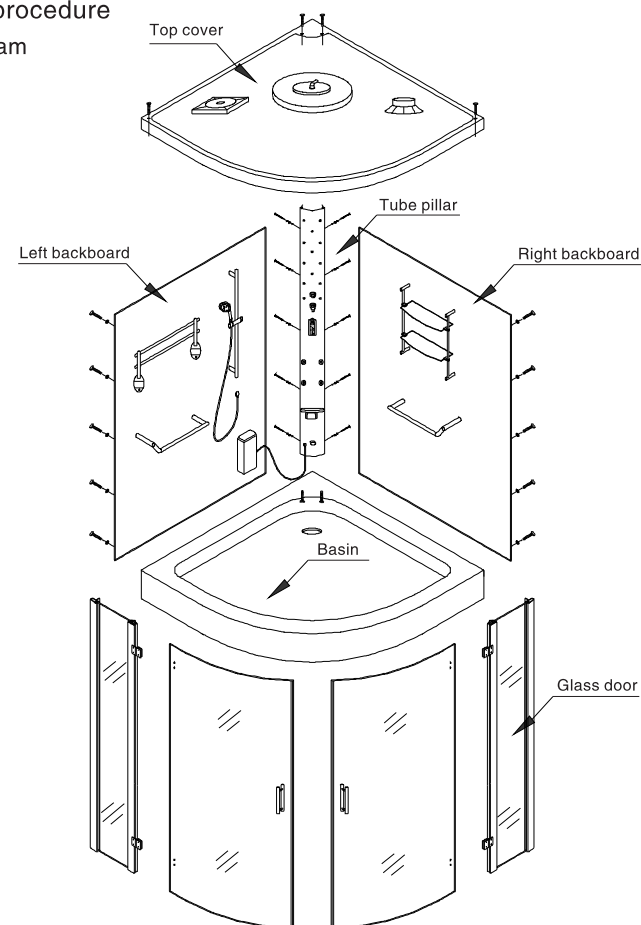


2. Levelling the basin

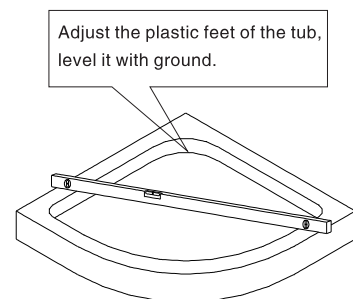


3. Installing left plate

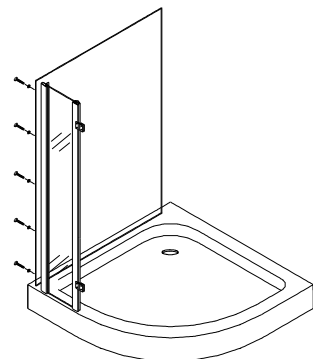


4. Installing right plate

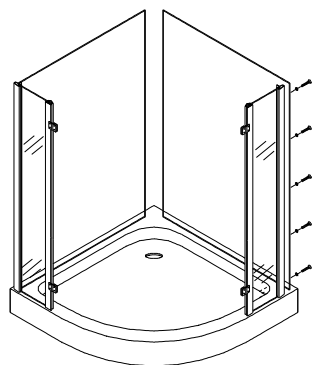


5. Installing tube pillar

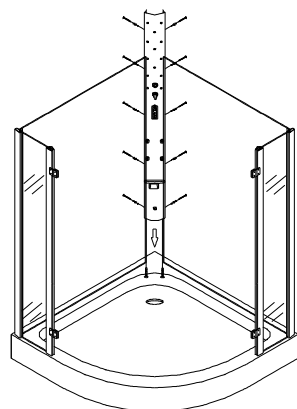


6. Installing left glass door

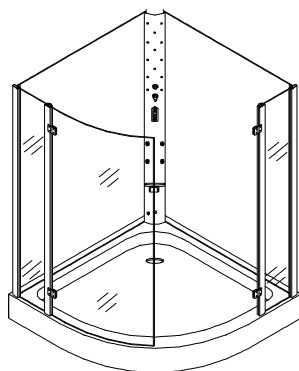


7. Installing right glass door

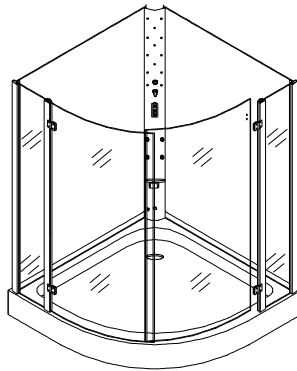

8、安装支物架、花洒等配件


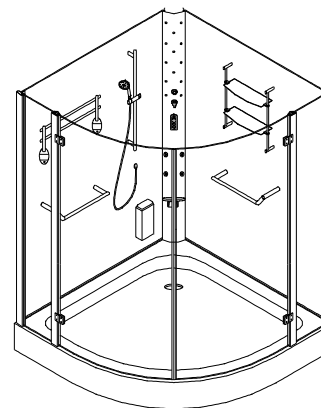


9. Top cover installation

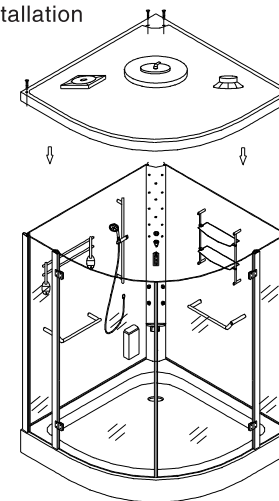

10. Connecting headshower and water pipe.

- (1) Obey the arrowhead, connect cold, hot water pipe with their supply pipe.
- (2) Move the properly installed steam room to right corner, insert the drainage pipe with the drainage system.

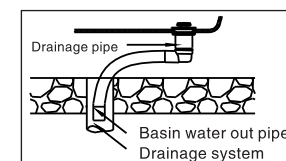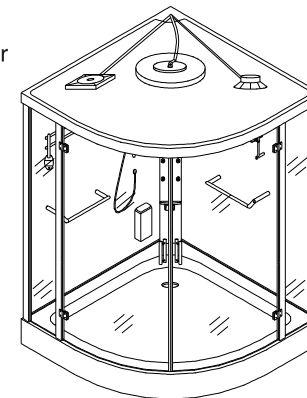


Four. Installation attestation

1. Move the hander repeatedly, check the door to see if it move soomthly, and the magnetic function automaticly.
2. Turn on the power , follow the arrowhead and operate the controlling board, check all the function condition.
3. Turn on the cold and hot water switch, operate the exchanging switch, check the liner jets, spayer, head shower to see if they working well.


Five. Attention

1. Do not put high temperature or heavy thing on the steam house in case of damage the steamHouse durring the installation.
2. Do not stand or sit in the basin when stalling in case of dis-shape of the basin.
3. When connecting the cold & hot water pipe, be sure to fix the nut properl, to avoid to much water presure, protect the water pipe broken and worn off.
4. Be careful yourself durring the installation, in case of the hurt your body by aluminum and glass.


- 1.glass door(1pc)
- 2.hander(1pc)
- 3.basin(1pc)
- 4.steam box(1pc)
- 5.M4X25(10pc)
- 6.fixed glass(1pc)
7. Aluminum plate(1pc)
- 8.Towel shelf(1pc)
- 9.aluminum connecting bolt(10pc)
- 10.top cover(1pc)
- 11.hexagonal screws (4pcs)
- 12.Alevator pillar
- 13.Plastic cycle(10pcs)
- 14.plastic balls (10pcs)
- 15.armrest(1pc)
- 16.Left fixed door(1pc)

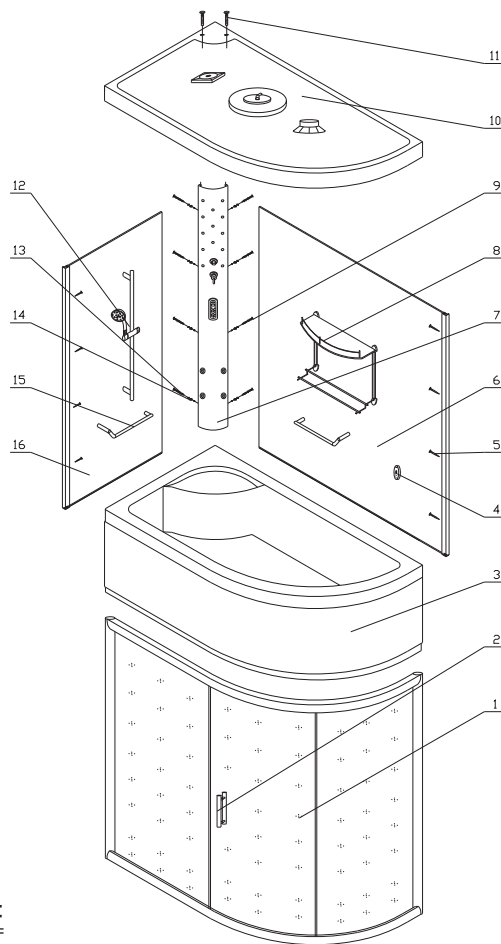


Products installation procedure:

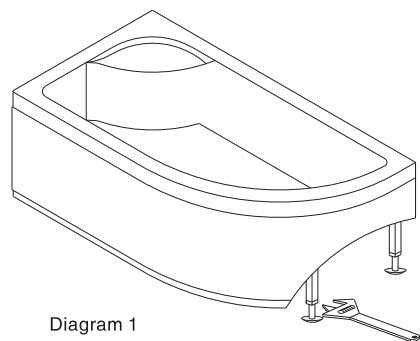


1. Levelling the basin and place the basin at the installation corner,place a levelling ruler on the tub,adjust the foundation bolt at the bottom to enable all the bolts to touch the ground and level the tub.
See illustration diagram 1.

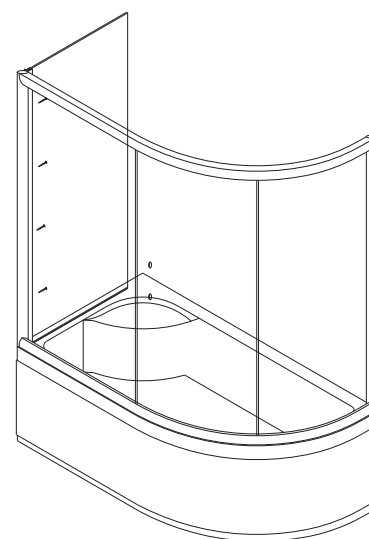

2. Place the glass door onto the tub,level it.
See diagram 2

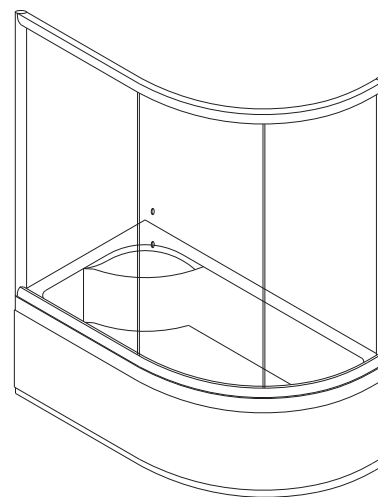

3. Place the left fixed door on the tub,fix it with M4*25 screws with them. See diagram 3.

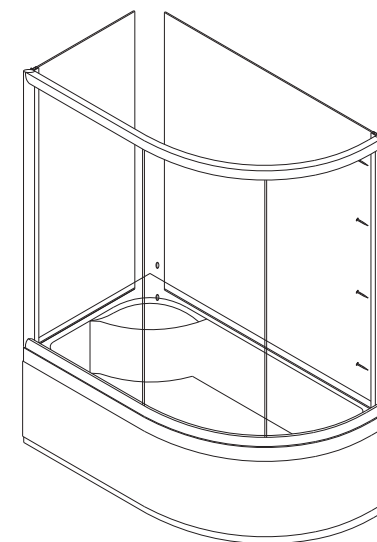

4. Place the fixed glass on the tub,fix it with M4*25 screws with them. See diagram 4.

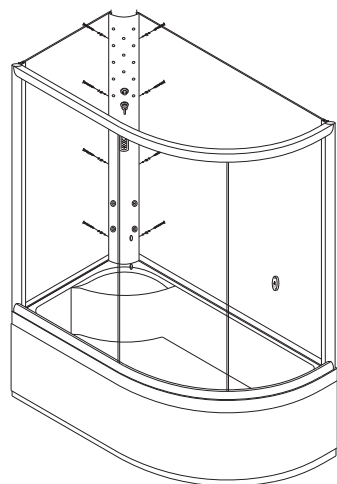


Diagram 5

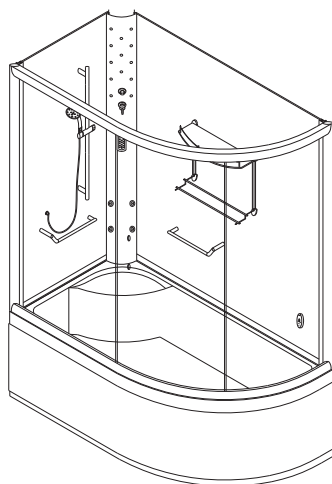


Diagram 6

5. Insert the aluminum board between the two fixed doors, fix them with hexagonal screws. See diagram 5.

6. Install the handrail, armrest, towel shelf, elevator pillar, steam box on the steam house one by one. See diagram 6.

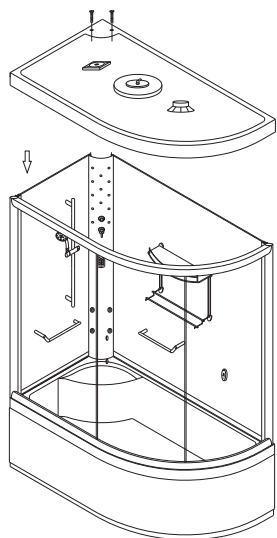


Diagram 7

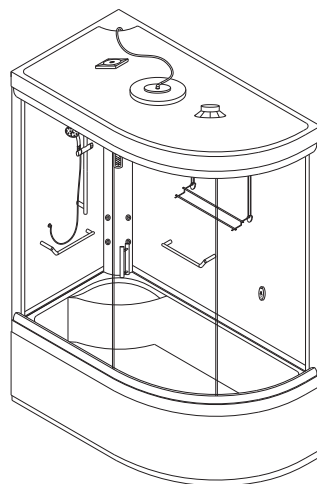


Diagram 8

7. Put the top cover onto the steam house, fix it with hexagonal screws. See diagram 7.

8. Connect all the water pipes, insert CD, telephone, and power wires. Now the steam room is ready for enjoying. See diagram 8.

One. Preparation


1. Please check all the accessories are completed before starting installation.
2. Pre-reserved the water hole of the basin before make sure the installing place.
3. Pre-reserved water holes on the wall with the steam room cold and hot water let in.
4. Pre-set the safety socket and wire properly before installation.

Two. Tools preparation



- | | |
|--------------------|--|
| (1) leveling ruler | |
| (2) screw tool | |
| (3) wrench | |

Third. Installation procedure


1. installation diagram

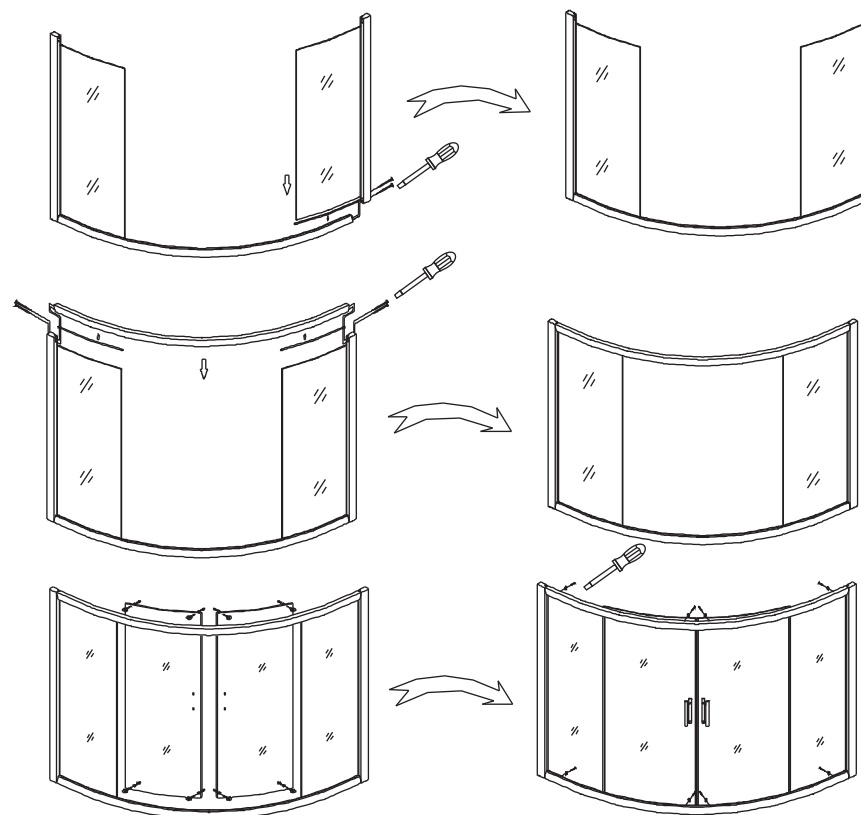


2. Product design

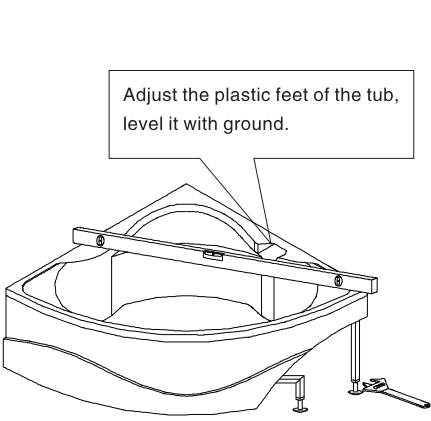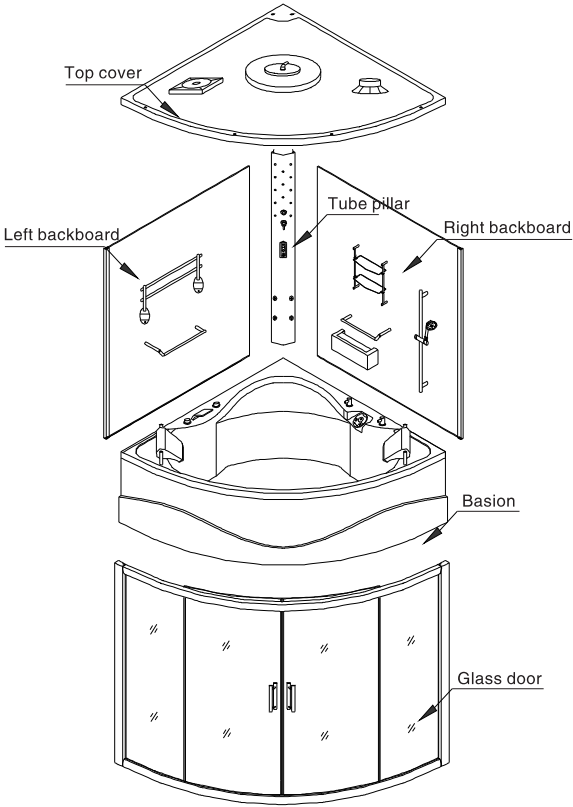


3. make the tub level with ground

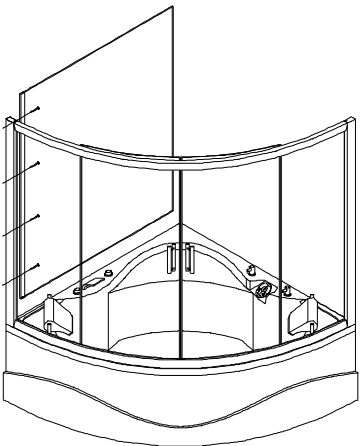


4. istalling left backboard

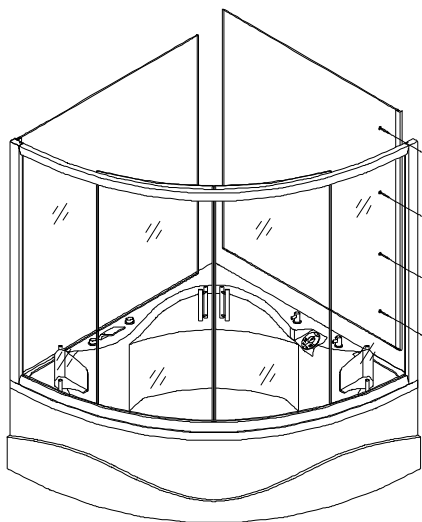

5. Installing right backboard

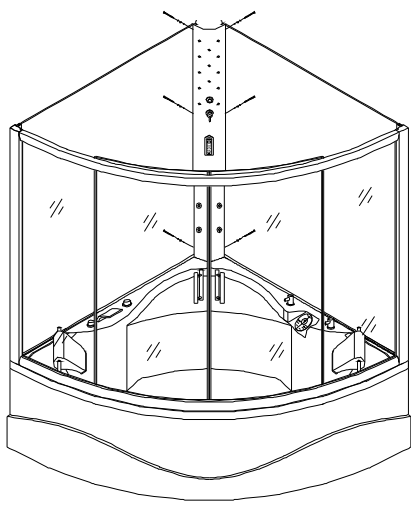



6. Installing tube pillar

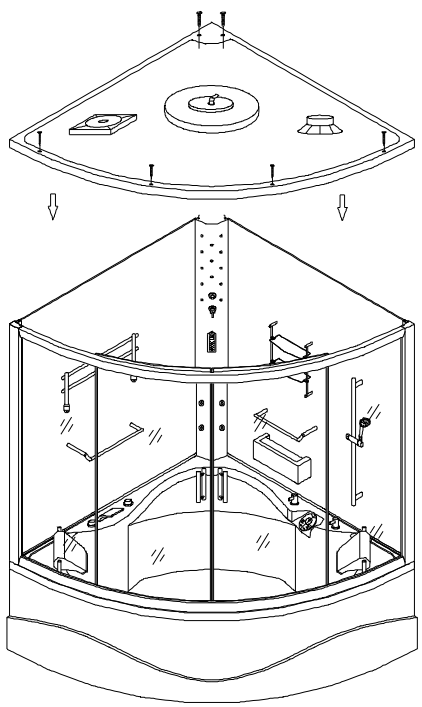

7. Installing top cover

8. Connecting headshower and water pipe.

- (1) Obey the arrowhead, connect cold, hot water pipe with their supply pipe.
- (2) Move the properly installed steam room to right corner, insert the drainage pipe with the drainage system.

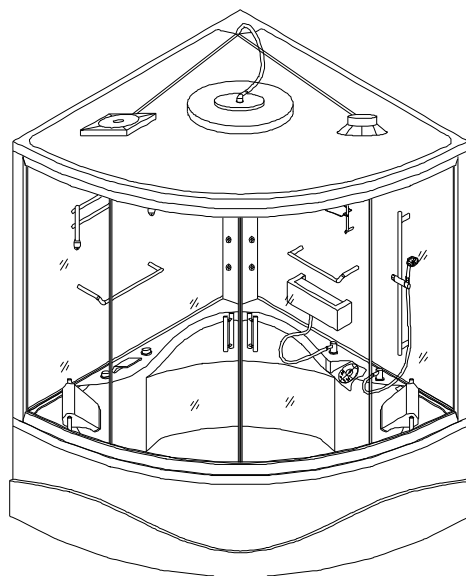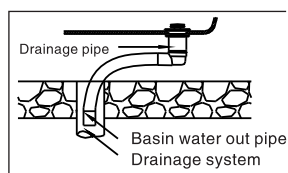

Four. Installation attestation

1. Move the handle repeatedly, check the door to see if it move smoothly, and the magnetic function automatically.
2. Turn on the power, follow the arrowhead and operate the controlling board, check all the function condition.
3. Turn on the cold and hot water switch, operate the exchanging switch, check the liner jets, spayer, head shower to see if they working well.

Five. Attention

1. Do not put high temperature or heavy thing on the steam house in case of damage the steamHouse durring the installation.
2. Do not stand or sit in the basin when stalling in case of dis-shape of the basin.
3. When connecting the cold & hot water pipe, be sure to fix the nut properl, to avoid to much water presure, protect the water pipe broken and worn off.
4. Be careful yourself durring the installation, in case of the hurt your body by aluminum and glass.

One. Preparation


1. Please check all the accessories are completed before starting installation.
2. Pre-reserved the water hole of the basin before make sure the installing place.
3. Pre-reserved water holes on the wall with the steam room cold and hot water letin.
4. Pre-set the safty socket and wire properly before installation.

Two. Tools preparation



- (1) leveling ruler 
- (2) screw tool 
- (3) wrench 

Third. Installation procedure


1. installation diagram

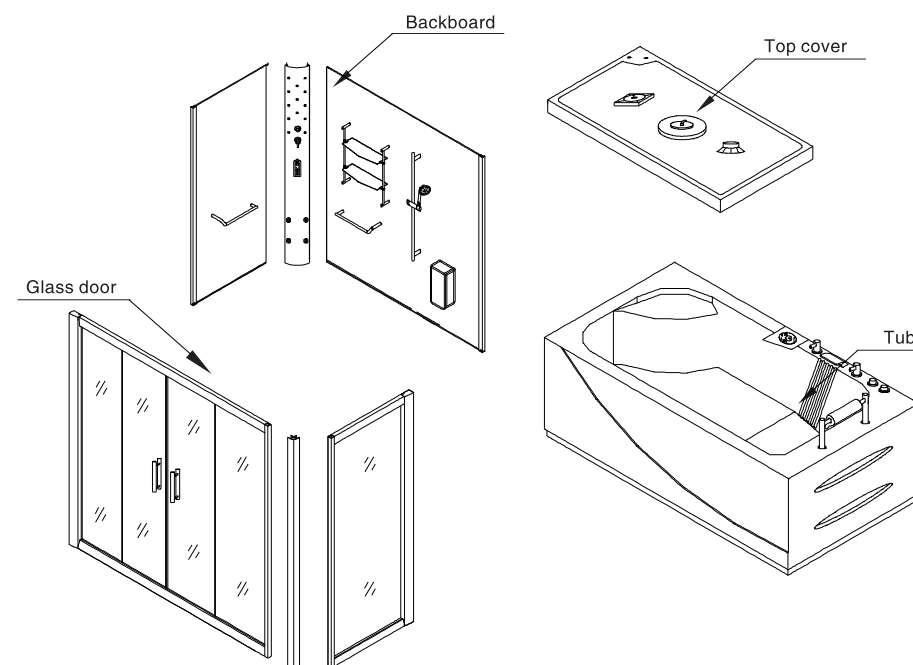

2. instal pillow and level the tub

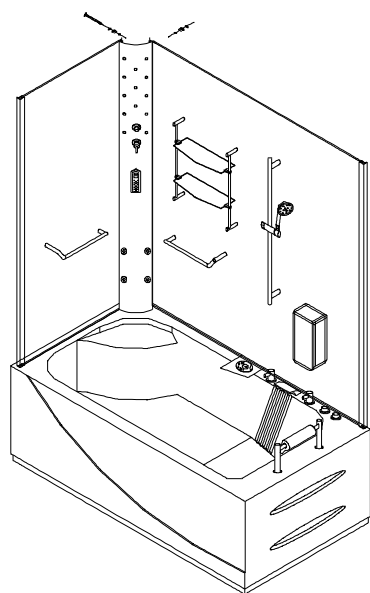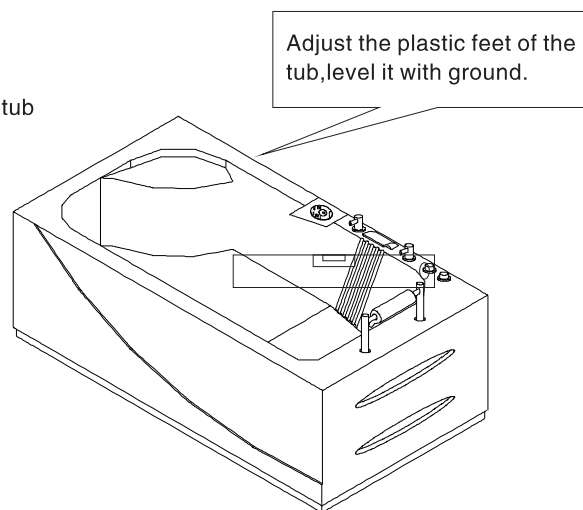



3.backboard installation

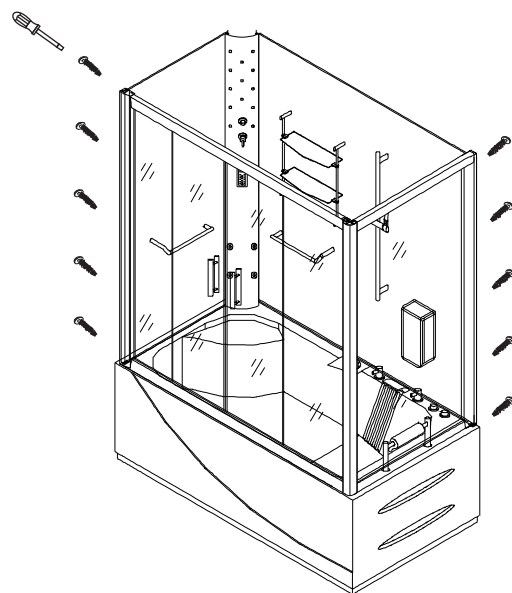

4.glass door installation

5.Top cover installation、connecting headshower and water pipe.

- (1)Obey the arrowhead, connect cold, hot water pipe with their supply pipe.
- (2)Move the properly installed steam room to right corner,insert the drainage pipe with the drainage system.

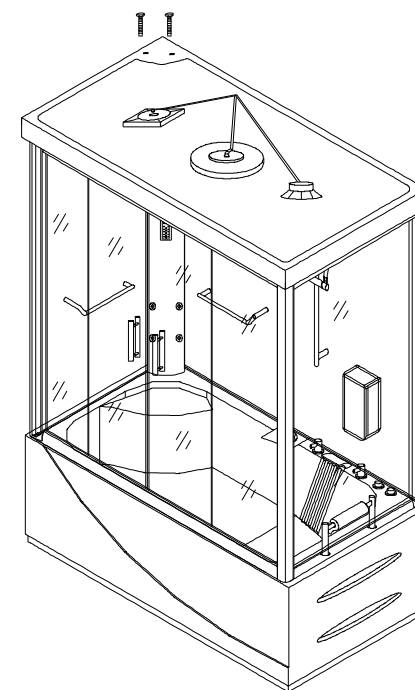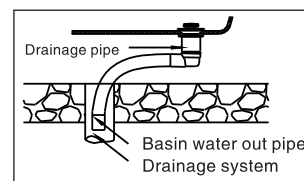


Four. Installation attestation

1. Move the hander repeatedly, check the door to see if it move soomthly, and the magnetic function automaticly.
2. Turn on the power , follow the arrowhead and operate the controlling board, check all the function condition.
3. Turn on the cold and hot water switch, operate the exchanging switch, check the liner jets, spayer,head shower to see if they working well.

Five. Attention


1. Do not put high temperature or heavy thing on the steam house in case of damage the steamHouse durring the installation.
2. Do not stand or sit in the basin when stalling in case of dis-shape of the basin.
3. When connecting the cold & hot water pipe,be sure to fix the nut properl, to avoid to much water presure, protect the water pipe broken and worn off.
4. Be careful yourself durring the installation, in case of the hurt your body by aluminum and glass.

Computerized Bath Room Key Board

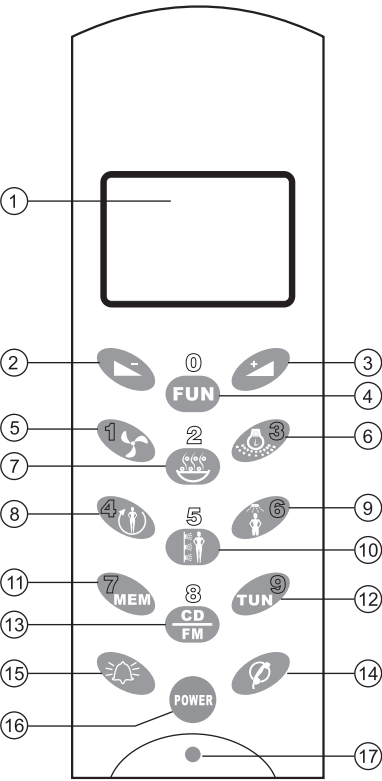

- ① Luminous display screen
- ② Volume or function decreasing key
- ③ Volume or function increasing key
- ④ Function switch or telephone 0 key
- ⑤ Discharge fan or telephone key 1
- ⑥ Lighting, back light or telephone key 3
- ⑦ Steam or telephone key 2
- ⑧ Side spraying or telephone key 4
- ⑨ Top spraying or telephone key 6
- ⑩ Side spraying or telephone key 5


Controller Key Board

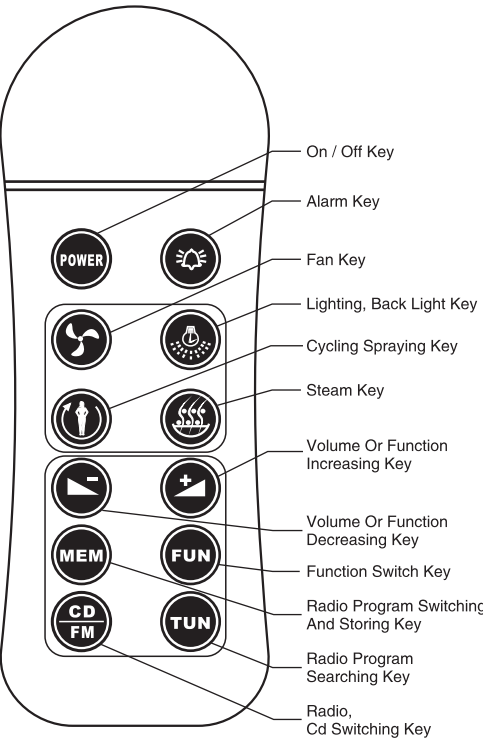

- ⑪ Radio program switching, storing or telephone key 7
- ⑫ Radio program searching or telephone key 9
- ⑬ Radio, cd or telephone key 8
- ⑭ Telephone key
- ⑮ Alarm key
- ⑯ On / off key (with red back light)
- ⑰ Telecontrol receiving window

- 1. ON/OFF:** When the system in on, press key to actuate the system and all the functions of the key board and press this key again to turn off the board and stop all the functions.
- 2. Lighting Lamp:** When is pressed to actuate the system, the background light is on. Press key for the first time to turn off the background light; press it for the second time to turn on the top light; press it for the third time to turn on the background light; press it for the fourth time to turn off the top light; press it for the fifth time to turn off the background light.
- 3. Discharge Fan:** Press key to turn on the discharge fan With the luminous indicator on; press it again to turn off the discharge fan.
- 4. Steam:** Press key to start steam with the luminous indicator on to indicate the ambient temperature, the timing of 45 minutes and the upper limit of temperature at 45°C. Lack of water will not turn on steam and the luminous indicator will not flash. Press this key again to turn off steam.
- 5. Setting up Moisture of Steam and Time:** When steam is on, press key FUN to set steam temperature; press key or key to set the increase or decrease function; when steam timing reaches the set time or the ambient temperature reaches the set value, steam will automatically stop.
- 6. Spraying:** (This function is optional, usually controlled with a tap)
Press key to turn on or turn off top spraying; Press to effect switching between up, medium, low and off; Press key to effect switching between up spraying, medium spraying and low spraying; press it again to turn off the automatic function.
Note: Each of the 3 keys locks up the functions of the other two. One function takes effect at one time. When one function is in effect, the other two are off.
- 7. Sound Effects:** Press key once to turn on the radio with the luminous screen indicating present frequency. When the radio is on, click ky TUN to effect manual search for programs; press it for half a second to effect upward search for programs. When a program is identified, press for 2 seconds the key MEM on the key board or telecontrol board to store the frequency where it is. Click MEM once effects switching upward within the range of 1-10. Press key again to switch CD input with the luminous indicator indicating CD.
- 8. Volume Adjustment:** When the radio in on with key FUN unpressed, press or to effect increase or decrease of volume with the luminous indicator indicating 0dB — 16dB.
- 9. FUN:** When the radio is on, press key FUN to effect a series of switching:
→ Volume adjustment (refer to item 8→indicating present program→ambient temperature
Timing of steam (refer to item 5←steaming temperature setting (refer to item 5)←indication of volume. ←
- 10. Telephone:** When the system is on and there is a call, the bell rings and radio is off. Press key to stop the bell for the phone with the luminous indicator light on. When telephone communication ends, press the key to turn telephone off. When there is no call, press the key to switch to dialing with the digit showing. Press the key again to turn telephone off.
- 11. Alarming:** In case of imergency, press key on the key board or on the telecontroller to ring the alarm with the luminous screen showing SOS with repeated flashing to turn off all functions (steam, spraying, sound, etc) with the exception of lighting. Only the key POWER can turn the alarm off.

Connection Blueprint Of Steambox

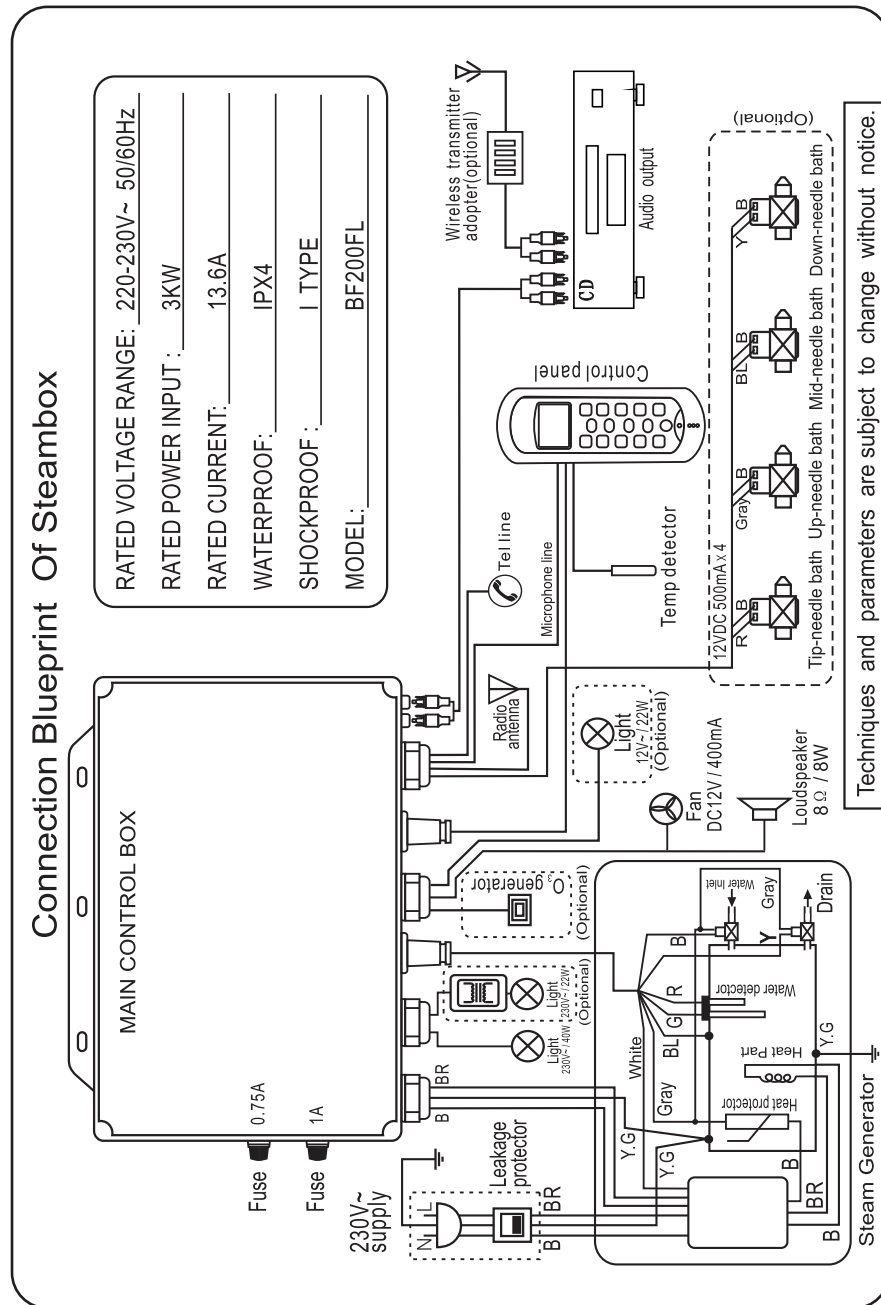

A. Safety Precautions

1. The installation and adjustment of the product must be effected by qualified electricians or professionals dispatched by our sale agents.
2. The power connecting facilities must be in conformity with the safety standard and with the brand and name of the half-finished products, must be provided with earth leakage protective switches and fuse against excessive current or excessive voltage and must be effective.
3. In order to avoid burning, please stay away from the steam outlet and the sauna stove as the steam generator and the stove are rather hot.
4. No valve or stoppage is allowed between the steam outlet and pipes.
5. In installation, no wires, cpu of controller or key board can be dismantled (There are no parts dismantle by the user in our cpu and key board) In case of violation on the part of the user, our company is not responsible for any trouble, electric leakage or shock.

B. Maintenance Fundamentals

1. After using it each time, dry it off moisture on the product with a dry towel so that it is kept shiny and fine.
2. The daily cleaning of the product should be effected with ordinary detergents and soft cloth instead of detergents containing acetone or ammonia water; in case the room has stains left by sealing bands, rub them gently with gasoline-wet soft cloth.
3. Please avoid scratching the surface with hard or sharp objects. In case there are scratches on the surface (white plates), polish it gently by means of waterstone sand paper 1500# with some toothpaste to make it as shiny as a new one.
4. Gold-plated or chrome-plated parts need not be often polished (avoid contacting organic solvents)
5. At the end of each use, discharge all the water in the steam generator so as to prolong the service life of the generator.
6. In case the water flow is not smooth, remove the top cover and get rid of the impurities such as hair and re-mount it.
7. Check regularly the power line, switches and plugs to see if there is any damage done by rats, ants or insects.
8. Check regularly the water pipes to see if there are cracks, bending or stoppage so as to ensure normal service.
9. It is advisable to have the steam generator cleared of scales after repeated heat circulation.
10. For a longer service time, the intervals between successive switching must be over 30 seconds.
11. If the product has been left unused for a long time, it should be kept at a dry and well-ventilated place free of corrosive gases and should be cut off water and power supply.
12. When power wires are to be replacing, go the manufacturer or his sales agent for purchasing and replacing by his professionals.

One. Water jet no water out or weak water power

1. No water out:check the power valve.
(12V.5W-10W light ball testing or other testing measurement tool)
- A. If no power,the computer board should have problem,check it screen,if the screen if in good condition,please check the power line system.
- B. Check the silicon audion 's condition.
- C. If have power,check the electric magnetic vavle.(well eletric magnetic has voice or testing with all-function testing tool)
- D. If no problem with the eletric magnetic valve,check if there water passed or plugged up.
- E. Check the alteration valve's place to see if it move on to shower place.

Second. steam,water shower weak power

1. Water supply presure power is weak.
2. Jets are plugged up.
3. Water valve is not opened compeletely.
4. Water line pipe is too small.

Three. water leakage when steaming

1. Water leakage when first time installation,check:
 - (1) Wire connector have stain or wrong connecting.
 - (2) Check water inlet of steam box if there have stem.
2. Water leakage when used sometime:
 - (1) Check the steam accelerator vertical allotment.
 - (2) If the steam acceleraator is well,check the inside,chekc it the flexibility
 - (3) If the **works well,use the all function testing tool test the magnetic pipe.
 - (4) If the magnetic pipe is good,check the electric magnetic water inlet of the steam box's condition.
 - (5) If the electric magnetic water inlet of the steam box has no problem,check audio.
(Using the all function testing tool)
 - (6) If the above mentioned 5 all have no problem,so check the wire of the water controller or other portential problem.

Four. No steam

1. Steam accelerator has no water;
2. Steam house inside temperture higher than the norminated temperature.
3. Heater pipe of .steam accelerator is does't work.
4. Electronic part of steam contron box is damaged.

Five. Telephone no voice

1. Voice transforming hole jam
2. Telephone wire mis-connected
3. Voice adjustor did not start.

Six. No remot function

1. Remoting signal other than the receiving window or mis-direction
2. Other strong power interrupting
3. Remotor has no power.
4. Remotor system was damaged.

Seven. Steam room leakage reason

※As usual, leakage problem results from the first time in-properly installation. If we make right installation procedure, the problem can be avoided. To fix any leakage problem, we should fix it with glass glue and should wait at least one hour then re-use it.

1. Leakage when in the off conditon:

- (1) Pipe broken
- (2) Pipe connector too tight or too loose
- (3) Pipe connector sealing circle worn off
- (4) Switch vavle loose
- (5) Bad quality of water valve or water pipe of user's house

2. Water leakage when taking showe

- (1) Bad sealing of steam room or glass circle worn off
- (2) Glass door bad sealing
- (3) Bad sealing of starting switch of bathtub
- (4) Leakage of shower electric valve

3. Drainage system water leakage

- (1) Check the drainage system
- (2) Water outlet pipe broken
- (3) Mis-place of drainage water pipe,ground drainage system
- (4) Ground drainage system jam

Eight: ventilation fan no response**1. It does not work after the installtion:check:**

- (1) Turn on the function,adjust the proper wire,restart
- (2) Check the properly connection of the wires

2. It does not work after working sometime,check:

- (1) Proper connection of the ventilation fan wires
- (2) If there no electronic output,so please check the voice and the screen picture,if the has voice,please check the screen picture,if there have no pictue shows on the screen that is to say,the key board has problem,please use the remotor.

Nine: When enjoying steam function,user's home general swich turn off**Ten: Radio has no voice and no channel, check:**

1. Radio has no voice at all, voice in off conditon;
2. Check the speaker to see if it burn out or wire dis-placed
3. Check the screen to see if it has sinnal when start the function,if has the signal, so the player has problem, if has no signal, the radio receiving board has problem.

Eleven:simultenously steam function start when turn electricity on or electricity controlling box out of control.

1. Wrong linkage between controlling board and controlling box.
2. CPU worn out inside controlling box.

Remark: all linkage must be done when the electricity powered off.

Twelve: Television can not start.

1. Check the proper conection of the soft pipe with the TV and the start swich.
2. If the soft tub has no problem,check the switch condition,if both of them have no problem,so just change the TV.